

STREET PLATE LIFTING RING **SAFETY PRECAUTIONS**

WARNING: PRIOR TO USING ANY HOIST RING, PLEASE READ THE FOLLOWING FOR PROPER INSTALLATION AND USAGE.

As with all mechanical devices, regular inspection for wear and strict adherence to use instruction is necessary to prevent misuse failure. Make sure the hoist ring pivots and rotates in all directions freely.

- Despite the 5:1 safety factor, **NEVER EXCEED THE RATED LOAD CAPACITY.** This safety margin is needed in case of misuse, which could drastically lower load capacity.
- Ensure the hoist ring pivots and rotates in all directions freely.

- It is highly recommended that the Street Plate Lifting Ring be used with a corresponding Actek Street Plate Nut that is welded flush with the surface of the street plate.

- **DO NOT APPLY SHOCK LOADS.** Always lift gradually. Repeat magnaflux testing if shock loading ever occurs.

• Actek Street Plate Lifting Ring base must be mounted flush and tight to the lifting surface during the lift. Lugs can be used for tightening and loosening with hammer or steel bar if necessary.

